

GASOLINE & DIESEL ELECTRIC FUEL PUMP

P/N 12-425 HOLLEY 25 GPH PUMP P/N 12-426 HOLLEY 25 GPH PUMP P/N 12-427 HOLLEY 32 GPH PUMP P/N 12-428 HOLLEY 34 GPH PUMP P/N 12-433 HOLLEY 32 GPH PUMP P/N 12-434 HOLLEY 25 GPH PUMP

INSTALLATION INSTRUCTIONS - 199R10683

The Holley® Electric Fuel Pump is designed to replace the original equipment fuel pump on carburetor-equipped cars, trucks, and generators. The solid-state design provides greater reliability, longer life, easy installation, freedom from hot weather vapor lock, and faster engine starting in cold weather. When properly installed, your fuel pump will provide a consistent, steady fuel supply to keep your vehicle running smoothly for many years to come even under severe driving conditions.

INCLUDED ITEMS:

- Qty. 1 Fuel Pump
- Qty. 1 In-line Fuel Filter
- Qty. 1 5/16" Fuel Line Fittings
- Qty. 2 1/4" Hex Self-Tap Screws
- Qty. 2 1/4" Nuts

OPTIONAL ITEM:

• Qty. 1 – Holley P/N 12-810 Oil Pressure Safety Switch

REQUIRED ITEMS:

- In-line fuel filter (74 micron) must be mounted on the pump's inlet port (included).
- Pump must be properly fused with a 3- to 5-Amp automotive-type fuse.

SUGGESTED TOOLS:

Electric Drill & 7/32" Bit	Locking Pliers	Wiring Connectors
Tube Cutter	7/16" Wrench & Fuel Line Plugs	Wire
Hose Clamp Pliers	Hose Clamps	5/16" Flex Hose

PREPARATION:

CAUTION! An (ABC) fire extinguisher needs to be within reach during installation.

- 1. Disconnect the vehicle battery, relieve the fuel line pressure, and then disconnect the fuel line.
- 2. Select the mounting area where the temperature won't exceed 140°F (60°C).
- 3. Ensure that the fuel pump electrical requirements match those of the vehicle's electrical system.

OPTIONAL:

- Install an OIL PRESSURE SAFETY SWITCH during the installation of this fuel pump.
- Connect the Red power lead to the "P" contact. This stops the pump operation if the engine stops and the ignition switch is ON (Figure 1).


INSTALLATION:

NEGATIVE GROUND SYSTEM ONLY:

- Select a mounting location:
 - A clean section of the frame away from an area susceptible to road hazard damage or exhaust systems.
 - Must be within 12 vertical inches from the fuel tank (bottom).
- Position the pump in an upward direction at 45° away from the tank. Mark and drill (2) 7/32" holes into the frame aligned to the mounting bracket (Figure 2).
- Place the pump over the holes and start the first 1/4" self-tap screw into the frame. Start the second screw capturing the black (negative) lead into the other hole. Tighten both screws.

NOTE: Some installations may require fastening the bracket to threaded studs with \(\frac{1}{2} \) nuts.

- Install the fuel filter (74 micron) on the inlet.
- Torque the filter and fitting to 10-15 ft./lbs. 5.
- Reconnect the fuel line and clean up any spilled fuel. 6.
- Connect the RED (positive) power lead to the OPTIONAL OIL PRESSURE SAFETY SWITCH or TO A RELAY CONTROLLED BY IGNITION. If this pressure switch is not available, connect to the ignition switch voltage supply terminal.
- Reconnect the battery terminals. 8.
- Turn ignition switch to ON, and start engine. Confirm the pump is operating by hearing a vibrating sound from it. Ensure there are no leaks in the fuel system.

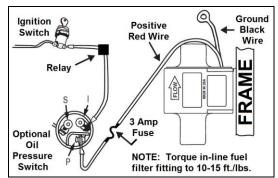

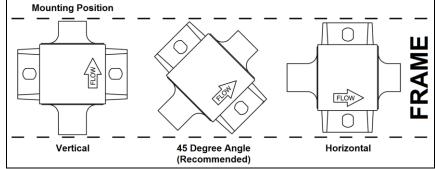
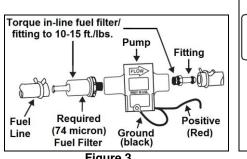


Figure 1

Figure 2





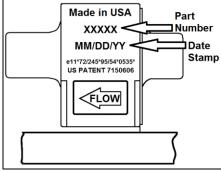


Figure 4

Holley® Technical Support 1-270-781-9741 or 1-866-464-6553 www.holley.com

199R10683

Revision Date: 7-22-20